


MAGNETON

STARTER MOTOR

9172 780

IMPORTANT DIMENSIONS TO FIT ON ENGINE

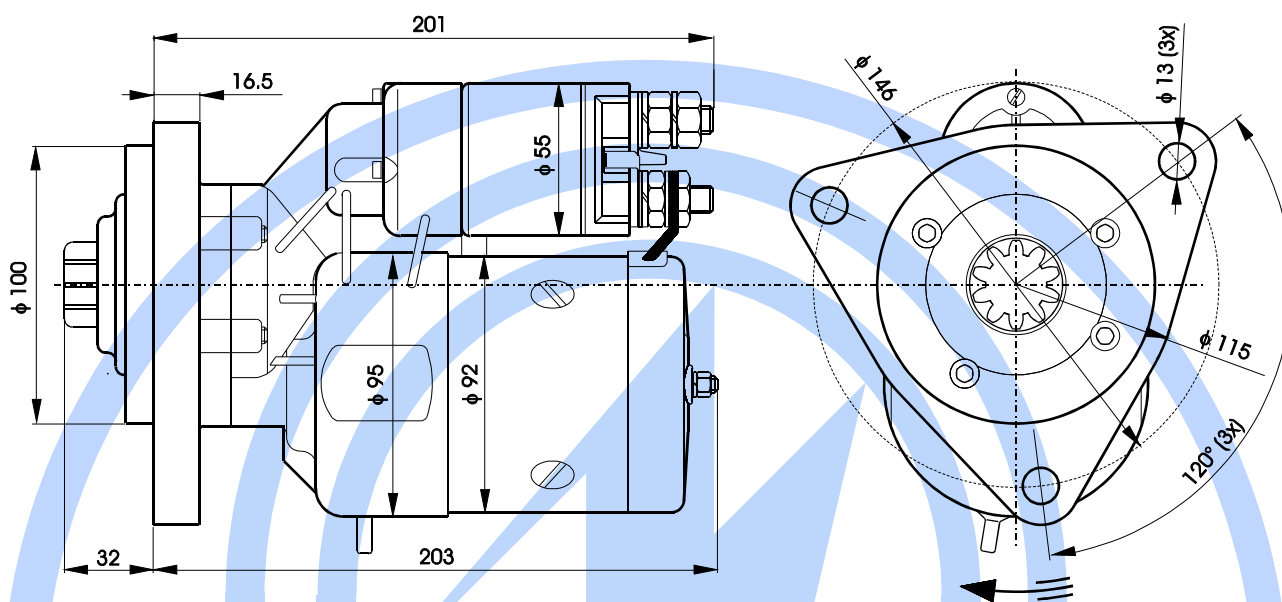

TECHNICAL DATA

Nominal voltage
Rated output
Rated speed
Static torque

24V
3,5kW
1500min
60Nm

Pinion teeth number
Module
Pressure angle
Weight

10
3
20°
5,8kg

APPLICATIONS

1. GAZ
2. MAZ
3. MTZ
4. PAZ
5. ZIL
6. PRONAR NAREW

CROSS REFERENCES

Iskra

Belarus

IS 0676; 11.130.676
AZJ 3223

2007 3708 000

Použití spouštěče 9172 780

Applications of starter motor 9172 780

Strana 2 / 3
Page

BRAND	MODEL	TYPE	ENGINE kW	PS	ccm	PRODUCTION YEAR
GAZ	33081 Sadko	D245.7			4 700	
BELARUS	MTZ 1221	D260.2			7 200	
BELARUS	MTZ 1522	D260.6			7 200	
BELARUS	MTZ 890; 892	D245.5			4 750	
ZIL	5301	D245.12			4 750	06/96 -



Náhradní díly spouštěče 9172 780

Spare parts of starter motor 9172 780

Strana 3 / 3
Page

1.0 Víko přední Front bracket	Cat. No. 695612P
2.0 Náhon pastorku Pinion drive	Cat. No. 7157990
2.1 Hřídel pastorková Pinion shaft	Cat. No. 3371380
2.2 Ložisko Bearing	Cat. No. 324165033
2.3 Volnoběžka sestavená Clutch drive assy	Cat. No. 7157980
2.4 Ložisko Bearing	Cat. No. 324165023
2.5 Volnoběžka Clutch	Cat. No. 7157970
3.0 Víko převodové Gear bracket	Cat. No. 6956560
4.0 Kotva sestavená Armature assy	Cat. No. 7153717
5.0 Stator s držákem kartáčů Stator with brush holder	Cat. No. 715469P
5.1 Nosič kartáčů sestavený Brush holder assy	Cat. No. 715703P
5.2 Sada kartáčů Brush set	Cat. No. -
6.0 Spínač sestavený Contactor assy	Cat. No. 7157870
6.1 Víčko sestavené Lid assy	Cat. No. 7155170
6.2 Pružina Spring	Cat. No. 4600207
7.0 Páka vysouvací Operation lever	Cat. No. 5233940
8.0 Víko zadní Rear bracket	Cat. No. 7157920

Poznámka Note

- Spínač sestavený bude dodáván včetně 3ks šroubů M5x45.
Contactor assy will be supplied with 3 pcs. screw M5x45.
- Víko převodové bude dodáváno včetně ložiska HK2212, komínku a ucpávky
Transmission cover will be supplied with bearing HK2212, dewatering and sealing.
- Pastorková hřídel bude dodávána včetně pružiny, zajišťovacího a pojistného kroužku.
Pinion shaft will be supplied with shoting spring, stop ring and lock spring.

