


MAGNETON

ALTERNATOR

9515 180

IMPORTANT DIMENSIONS TO FIT ON ENGINE

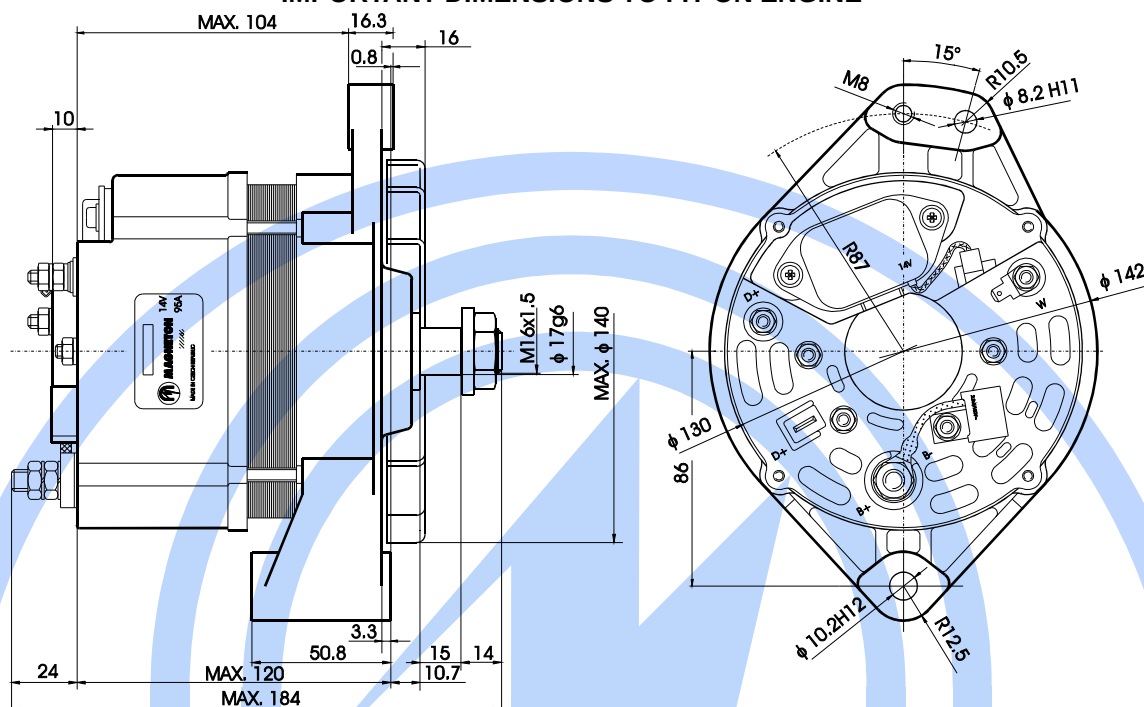

TECHNICAL DATA

Nominal voltage
Rated current at 1 800min⁻¹
Rated current at 6 000min⁻¹

14V
41,5A
95A

Maximum speed
Zero speed
Weight

13 000min⁻¹
1 200min⁻¹
4,9kg

APPLICATIONS

1. CASE
2. CATERPILLAR
3. CUMMINS
4. John Deere
5. Schmitz Cargobull

CROSS REFERENCES

Bosch 0 120 484 011; 0 120 484 018
0 120 484 026
0 986 040 580

Delco Remy DRB0280
Iskra IA 0875; 11.201.875; AAK5165
Lucas LRA02731

HC Parts CA 1198 IR
Hella 8EL 737 218-001

CASE A187263
Caterpillar 1052813; 9X 0341; PX 0341
Cummins 3 282 554
John Deere AH134883; AH137883; AH137884
RE36267; TY24485; TY6750

08 / 2012

MAGNETON a.s., Hulínská 1799/1, 767 01 Kroměříž, Czech Republic

Tel: +420 573 592 255; Fax: +420 573 331 239; e-mail: marketing@magneton.cz; www.magneton.cz

Použití alternátoru 9515 180

Applications of alternator 9515 180

Page 2 / 3

BRAND	MODEL	ENGINE			PRODUCTION YEAR
		TYPE	kW	PS ccm	
CASE	MAXXUM 5120, 5130, 5140				01/88 - 01/94
CASE	100 - SERIE 110	Cummins 6BT		5 900	05/97 -
CASE	100 - SERIE 120	Cummins 6BT		5 900	05/97 -
CASE	100 - SERIE 135	Cummins 6BT		5 900	05/97 -
CASE	SERIES D 780CK				01/88 - 01/94
CASE	SERIES L 680CK				01/88 - 01/94
McCormick	CX 140	Perkins 1000T	6 000		
McCormick	MC 115			4 000	
McCormick	MC 125			6 000	
McCormick	MC 90			4 000	
McCormick	MTX 110	Perkins 1000T			
McCormick	MTX 155			6 000	
McCormick	MTX 175			6 000	

Náhradní díly alternátoru 9515 180

Spare parts of alternator 9515 180

Page 3 / 3

1.0 Víko přední sestavené Front cover assy		Cat. No. 0137890
2.0 Rotor sestavený Rotor assy		Cat. No. 0136051
3.0 Víko zadní sestavené Rear cover assy		Cat. No. 0143050
4.0 Usměrňovací blok Rectifier		Cat. No. 0143190
5.0 Držák uhlíků s regulátorem Brush holder with regulator		Cat. No. 0143680
6.0 Stator sestavený Stator assy		Cat. No. 0137921
7.0 Řemenice Pulley		Cat. No. -
8.0 Ventilátor Fan		Cat. No. -

Poznámka Note

1. Víko přední sestavené je dodáváno včetně předního ložiska.
Front cover assembly is supplied with front bearing.
2. Rotor sestavený je dodáván včetně zadního ložiska.
Rotor assembly is supplied with rear bearing.
3. Víko zadní sestavené je dodáváno včetně usměrňovače.
Rear cover assembly is supplied with the rectifier.

